




AZ100 Pan Tilt Handle.

The kit contains:-

- 1 x Pan Tilt handle
- 1 x Mounting block
- 2 x M6 x 16 cap head bolts with washers
- 2 x M6 x 30 cap head bolts.

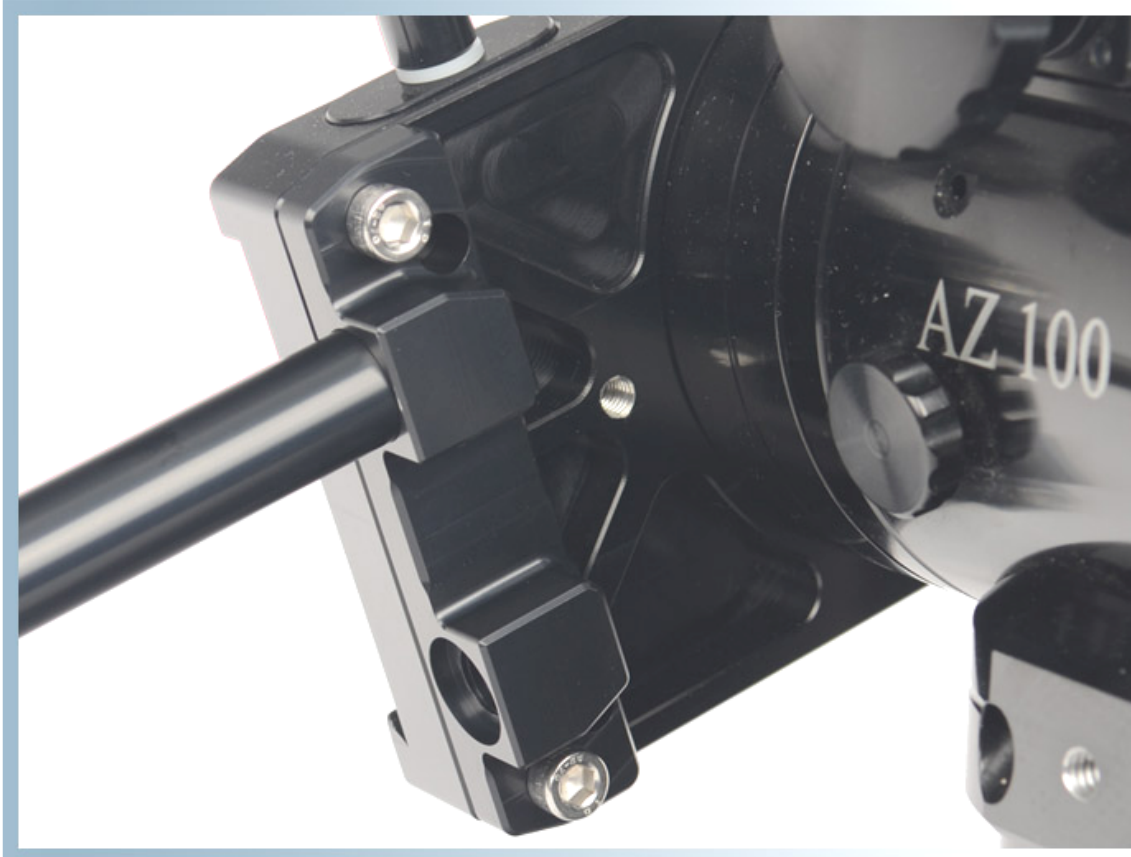

1. Attach the mounting block to the inside face of the saddle using the M6 x16mm bolts. If an altitude adjuster is fitted use the longer M6 x 30mm bolts.
2. Screw the handle in to the block using the upper or lower hole depending on preference.

Rowan Astronomy
Rowan Engineering Ltd.
Unit 8 Overfield
Banbury
Oxon
OX16 4XR
+44 (0)1295 251188
www.rowanastronomy.com
sales@rowanastronomy.com